Brake Override System (BOS)

- Powerpoint presentation explaining how the BOS operates and improves safety
- •BOS rollout explains in-service vehicle rollout to all vehicles subject to recent campaigns
- •BOS will be on ALL 2011MY vehicles in production

Brake Override System

Overview


History

Rollout

Brake Override System - Overview

- This system <u>cuts engine power</u> in case of <u>simultaneous application of both the accelerator</u> <u>and brake pedals</u>
- Once activated, the system reduces engine power – the engine does not stall or turn off.
- To regain normal acceleration, release the brake pedal and press down on the accelerator pedal.

Brake Override System - Overview

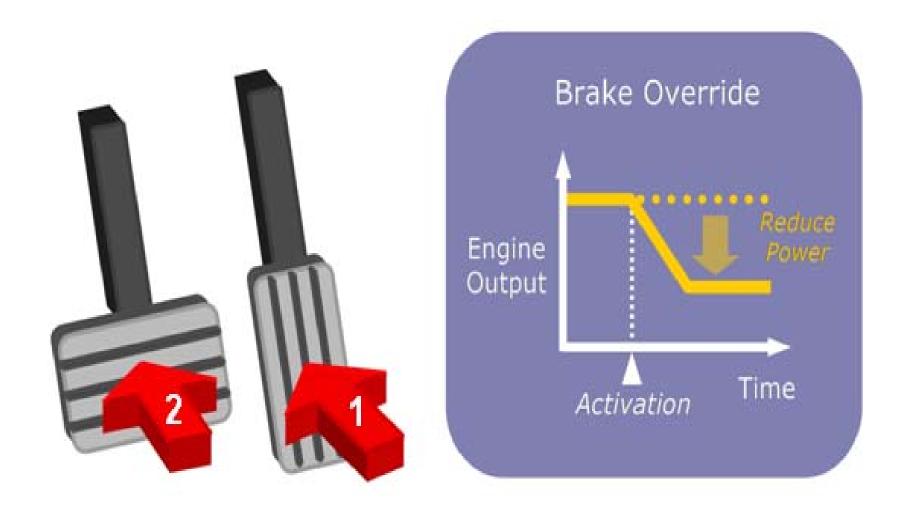

Brake Override System - History

- B.O.S. is already applied on:
 - All Hybrid vehicles, starting with 2000 Prius
 (to protect Hybrid system components)
 - 2011 Sienna
- B.O.S. will be applied on:
 - All of new North American vehicles before the end of 2010

Brake Override System - Rollout

- B.O.S. will be rolled out to the following in-service vehicles:
 - 2007 2010 Camry
 - 2007 2010 ES350
 - 2005 2010 Avalon
 - 2006 2010 IS250/350
 - 2009 2010 Venza
 - 2005 2010 Tacoma
 - 2008 2010 Sequoia